Contents

◆ ***PREPARATION***
- ■ Safety Precautions 3
- ■ Name of Each Part 8
- ■ Remote Control – Buttons and Display 10
- ■ Inserting the Remote Control Batteries 10
- ■ Getting Started 11

◆ ***OPERATION***
- ■ Selecting Auto Mode 12
- ■ Selecting Cool Mode 13
- ■ Selecting Heat Mode 14
- ■ Selecting Dry Mode 15
- ■ Selecting Fan Mode 16
- ■ Selecting the Turbo Function 16
- ■ Selecting the Energy Saving Function 17
- ■ Selecting **good'sleep** Mode 18
- ■ Adjusting the Airflow Direction 20
- ■ Selecting Auto Cleaning Function 21
- ■ Setting the On Timer 22
- ■ Setting the Off Timer 23
- ■ Selecting Silence Function 24
- ■ Operating Your Air Conditioner Without the Remote Control 24
- ■ Selecting **mpi**zone Mode 25

◆ ***RECOMMENDATIONS FOR USE***
- ■ Cleaning the Air Filter on Your Air Conditioner 26
- ■ Cleaning Deodorizing and Bio filter (Option) 26
- ■ Temperature and Humidity Ranges 27
- ■ Operating Recommendations 28
- ■ Solving Common Problems 29

Vivace_Inv_IB_31718A_E_1.28.10.indd 2 2010-1-28 13:45:09

Register your product at www.samsung.com/global/register

Safety Precautions

The following safety precautions are provided to protect the users' safety and prevent property damage. Make sure to read the followings and use the air conditioner properly.

- ***Keep this user's manual together with the installation manual in a handy place so that you can find it whenever you need to see it after reading this manual thoroughly.***

WARNING • This indicates the possibility of serious injury or death.

CAUTION • This indicates the possibility of serious injury or damage to environments when operated incorrectly.

When Installing

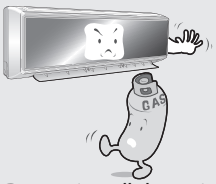

▶ Do not install the unit in a place where it is exposed to inflammable gas leakage.

▶ Do not install the outdoor unit where there's the risk of dropping such as on high outer wall or outside of the terrace.

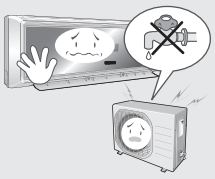

▶ Do not connect the ground to a gas pipe, water pipe, lightning rod or telephone earth.

▶ Contact the service center if the air conditioner is under water.

▶ The installation must be carried out by a licensed installer or qualified personnel when installing the unit for the first time or reinstalling it.

Regarding Power Source

▶ Do not pull the electric wire or touch the power plug with the wet hands.

▶ Install the switch and circuit breaker only for air conditioner.

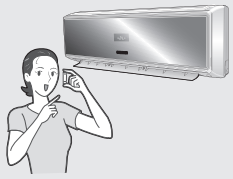

▶ Use the rated current fuse.

▶ Do not bend the electric wire by force or weigh down the air conditioner not to be out of order.

▶ Use the power source with separate wiring only for air conditioner.

▶ If the power plug is damaged, replace it by the manufacturer or qualified personnel to avoid the risk.

Vivace_Inv_IB_31718A_E_1.28.10.indd 3 2010-1-28 13:45:14

WARNING

During Operation

- Do not attempt to repair, move, modify or reinstall the unit on your own. Make sure that these installations are carried out by qualified personnel to avoid electric shock or fire.

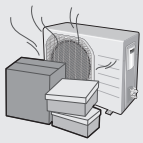

- Do not place any obstacles in front of the unit.
  Make sure that the unit is correctly ventilated at all times: Do not place clothing or other materials over it.

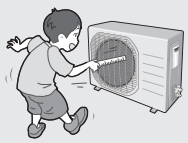

- Do not insert anything between the air outlet blades because the inner fan may be damaged and could cause injury. Keep children away from the unit.

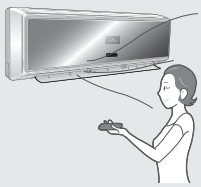

- When using a wireless remote control, the distance should not be more than 7 meters from the air conditioner. (If applicable)

- The manufacturer declines any liability for damage resulting from modifications or errors in the electrical or hydraulic connections.

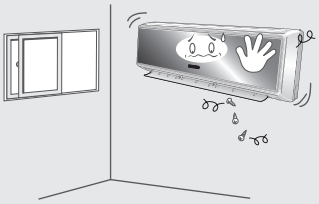

- Failure to observe the installation instruction, or use of the unit under conditions other than those indicated in the table 'Operating limit' of the unit installation manual, will immediately invalidate the unit warranty.

- Never spill any kind of liquid into the unit. Should this happen, unplug or main switch off the unit and contact an authorized service center.



- If the wireless remote control is not used for a long time, remove the batteries. (If applicable)

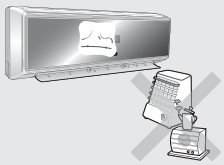

- Do not connect the electric heater to the air conditioner or repair it with your discretion.

- Do not place any materials so that children cannot step on it.

Vivace_Inv_IB_31718A_E_1.28.10.indd 4 2010-1-28 13:45:27

WARNING

DISPOSING THE UNIT

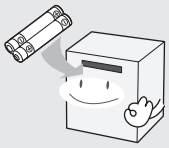

- Before throwing out the device, it is necessary to pull back the battery cells and get rid of them safely for recycling reasons.

- When you need to dispose of the unit, consult your dealer. If pipes are removed incorrectly, refrigerant may blow out and come into contact with your skin, causing injury. Releasing refrigerant into the atmosphere also damages the environments.

- Please recycle or dispose of the packaging material for this product in an environmentally responsible manner.

CAUTION

WHEN INSTALLING

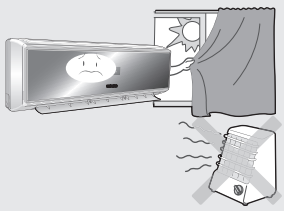

- Install the air conditioner avoiding direct sunlight or heater, especially water.

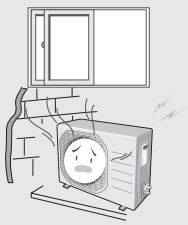

- Install the outdoor unit so as to let the discharged air out properly. Avoid a place that may disturb your neighbor by noise.

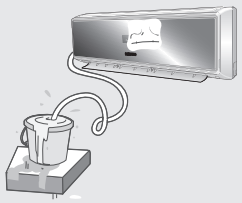

- Install the drain hose to let the water run safely and correctly.

Vivace_Inv_IB_31718A_E_1.28.10.indd 5 2010-1-28 13:45:35

CAUTION

Regarding Power Source

▶ Disconnect the circuit breaker when you don't use the air conditioner for a long time to save energy.

▶ Contact the service center or manufacturer if you want to repair the air conditioner.

▶ Contact the service center after turning off the air conditioner if strange noise is heard, burning smell or smoke blow.

During Operation

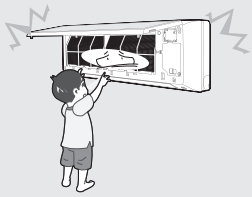

▶ Do not open the front grille during operation.

▶ Avoid cold and hot air reaching to person, pet or a plant directly for a long time.

▶ Avoid the water from getting into the air conditioner.

▶ Do not use the air conditioner for a long time in a closed room or in a place where there's a baby or an old person.

▶ Do not step on the air conditioner or put heavy object on it.

▶ Do not drink the water from the air conditioner.

Vivace_Inv_IB_31718A_E_1.28.10.indd 6 2010-1-28 13:45:42

CAUTION

During Operation

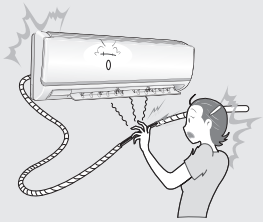

▶ Do not touch the pipes connected to the air conditioner.

▶ Do not use the air conditioner to maintain the machine, food, pet, plant or cosmetics.

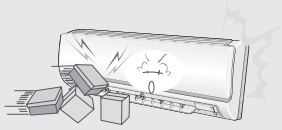

▶ Do not give excessive shock to the air conditioner.

Others

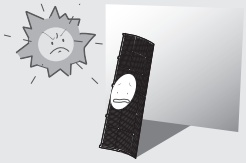

▶ Be sure that the air filter not to be exposed to direct sunlight.

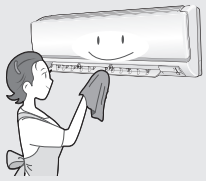

▶ Turn off the air conditioner and if the fan stops to operate, clean the air conditioner.

▶ Clean the air filter every 2 weeks.

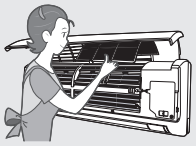

▶ Be sure to insert the air filter. When opening or closing the front panel, use a stable stool and watch your steps carefully.

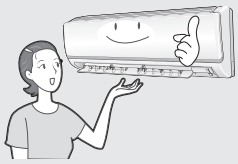

▶ This appliance is not intended for use by persons (including children)with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety: Children should be supervised to ensure that they do not play with the appliance.

▶ Do not clean the air conditioner by spraying water directly or with benzene, thinner or alcohol.

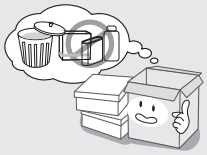

▶ Dispose of the packaging material in accordance with the local requirements.

▶ The maximum input power & current is measured according to the IEC standard and the input power & current is measured according to the ISO standard.

▶ The surface of the heat exchanger is sharp, so be careful of it when cleaning.

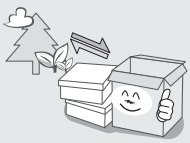

▶ All of the manufacturing and packaging materials used for your new appliance are compatible with the environment and can be recycled.

Vivace_Inv_IB_31718A_E_1.28.10.indd 7 2010-1-28 13:45:49

Name of Each Part

The design and shape can be changed according to the model.

Indoor Unit

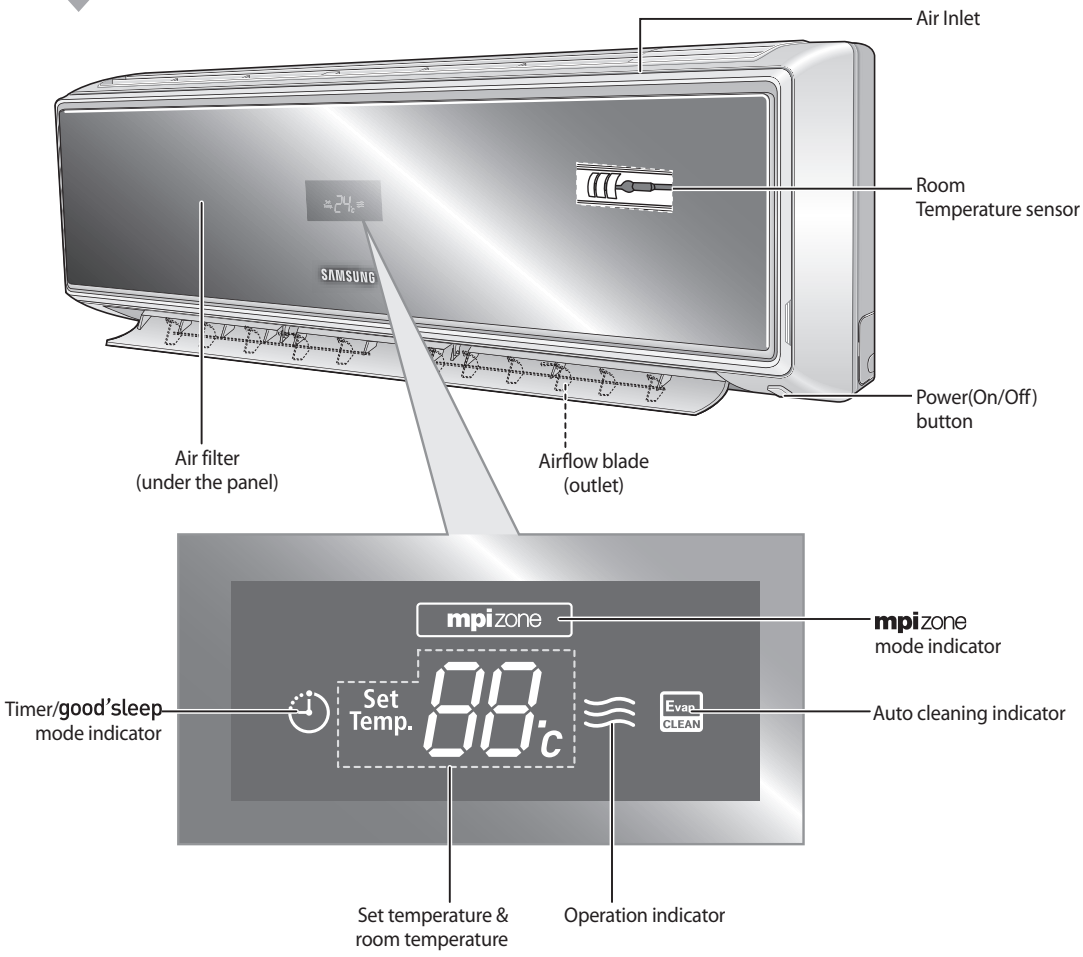

Vivace_Inv_IB_31718A_E_1.28.10.indd 8 2010-1-28 13:45:56

Outdoor Unit AQV09VB✳ Series
AQV12VB✳ Series

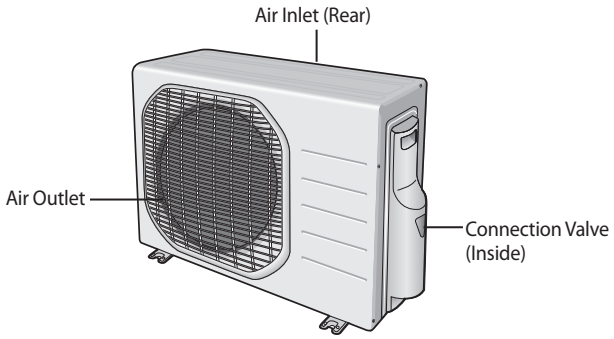

Outdoor Unit AQV18VB✳ Series

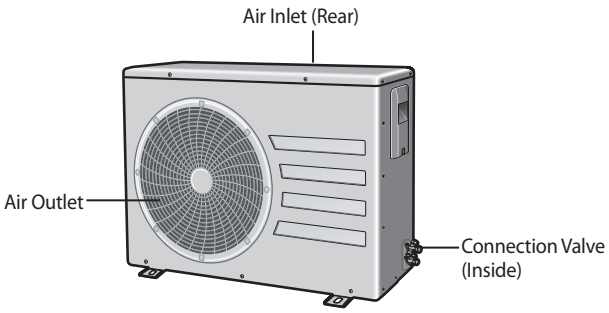

Outdoor Unit AQV24VB✳ Series

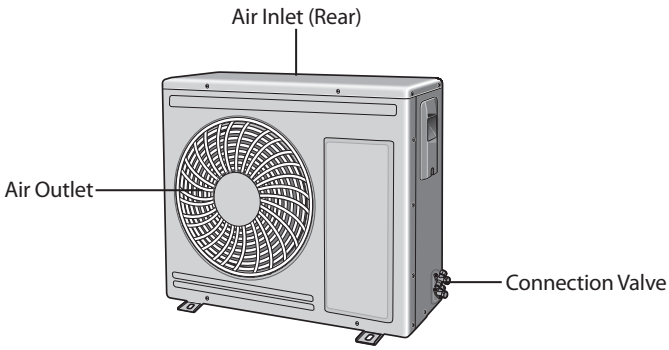

Vivace_Inv_IB_31718A_E_2.24.10.indd 9 2010-2-24 16:58:03

Remote Control - Buttons and Display

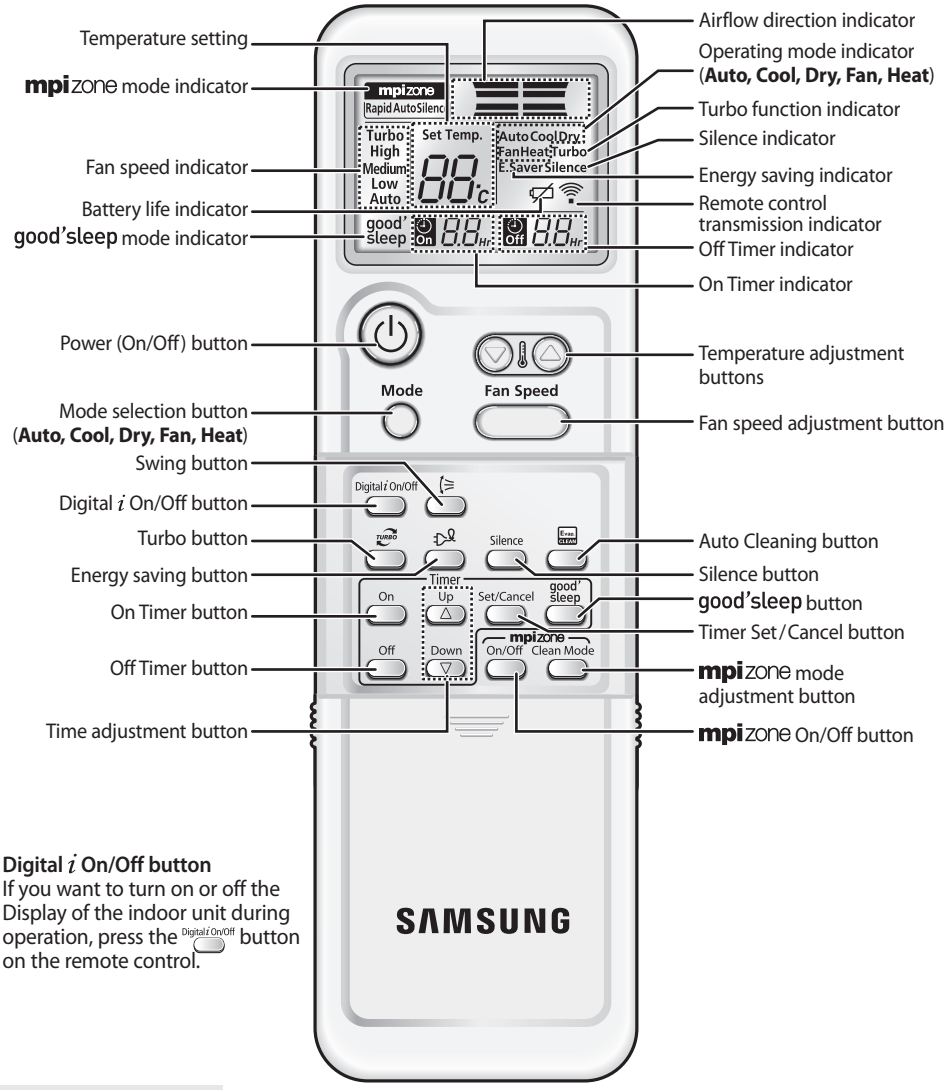

Note **Digital *i* On/Off button**
If you want to turn on or off the Display of the indoor unit during operation, press the Digital i On/Off button on the remote control.

Inserting the Remote Control Batteries

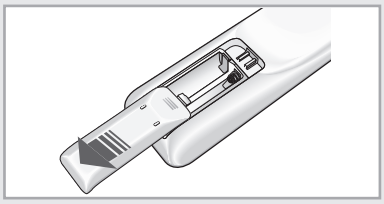

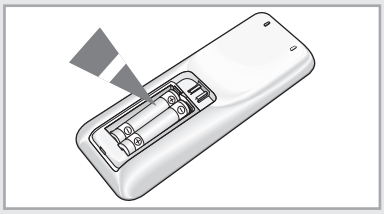

You must insert or replace the remote control batteries when:

- ***You purchase the air conditioner***
- ***The remote control does not work correctly***

Note

- Use two AAA, LR03 1.5V batteries.
- Do not use old and new batteries or different kinds of batteries together.
- Insert two batteries correctly as indicated by the + and – symbols.

1 Remove the battery cover in the rear of the remote control by pushing it with your thumb.

2 Insert two batteries, respecting the polarities as indicated by the + and - symbols.

3 Close the cover by sliding it back in place.

Vivace_Inv_IB_31718A_E_1.28.10.indd 10 2010-1-28 13:46:01

Getting Started

The User's Manual provides you with valuable information about your air conditioner. In order to take full advantage of the air conditioner's features, please read this manual carefully before using.

You have already seen the basic description of the unit on pages from 8 to 10. Starting with the next page, you will find a series of step-by-step procedures for each function available.

The illustrations in the step-by-step procedures use three different symbols:

PRESS	**PUSH**	**HOLD DOWN**

Vivace_Inv_IB_31718A_E_1.28.10.indd 11 2010-1-28 13:46:08

Selecting Auto Mode

You can select Auto mode if you want to cool or heat your room automatically. You can adjust the temperature in this mode.

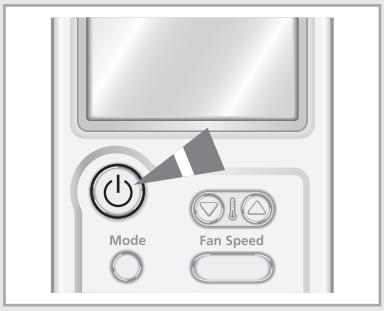

1 Press the (On/Off) button.

Result:
- The operation indicator on the indoor unit lights up.
- The air conditioner starts up in the mode you selected last.
- The indoor unit beeps.

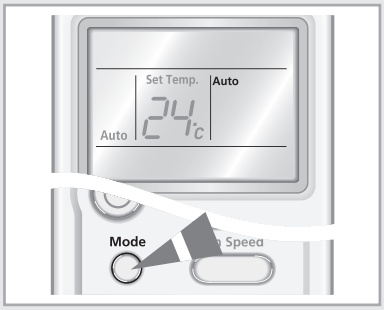

2 Press the Mode button on the remote control until **Auto** is displayed.

Result:
- The indoor unit beeps each time you press the Mode button.
- The air conditioner runs in Auto mode.
- Auto mode cools or heats the room depending on the set temperature.
- The air conditioner changes from Cool or Heat mode automatically, depending on the current temperature.

Note You can change modes at any time.

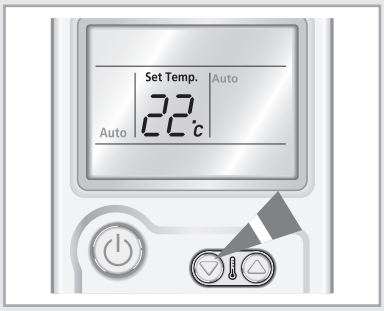

3 Press the button to adjust the temperature until the required temperature is displayed.
You can set the temperature between 16°C and 30°C.

Result:
- Each time you press the button:
  - The temperature adjusts by 1°C
  - The indoor unit beeps
- The fan speed adjusts automatically.

Vivace_Inv_IB_31718A_E_1.28.10.indd 12 2010-1-28 13:46:09

Selecting Cool Mode

You can select Cool mode if you want to cool your room.
You can adjust the temperature and the fan speed when cooling.

1 Press the (On/Off) button.

Result:
- The operation indicator on the indoor unit lights up.
- The air conditioner starts up in the mode you selected last.
- The indoor unit beeps.

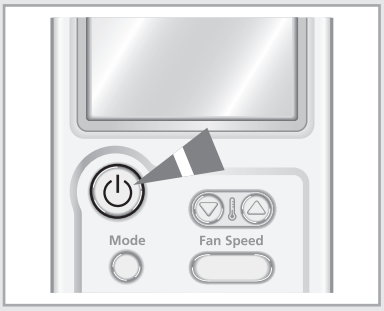

2 Press the Mode button on the remote control until **Cool** is displayed.

Result:
- The indoor unit beeps each time you press the Mode button.
- The air conditioner runs in Cool mode.

Note You can change modes at any time.

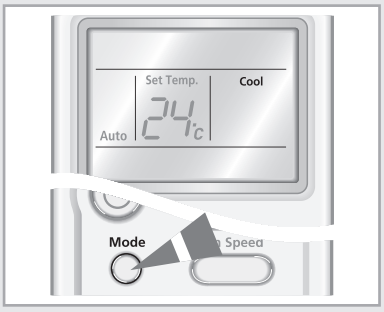

3 Press the button to adjust the temperature until the required temperature is displayed.
You can set the temperature between 16°C and 30°C.

Result:
- Each time you press the button:
  - The temperature adjusts by 1°C
  - The indoor unit beeps
- If the room temperature is higher than the selected temperature, the air conditioner starts cooling.
- If the room temperature reaches the set temperature, the air conditioner stops cooling, but the fan continues to operate.

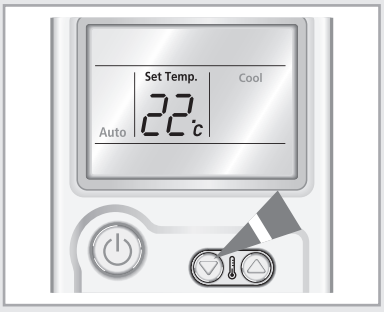

4 Press the Fan Speed button to select the fan speed until the required setting is displayed.

Auto ⇢ Low ⇢ Medium ⇢ High

Result: Each time you press the Fan Speed button, the indoor unit beeps.

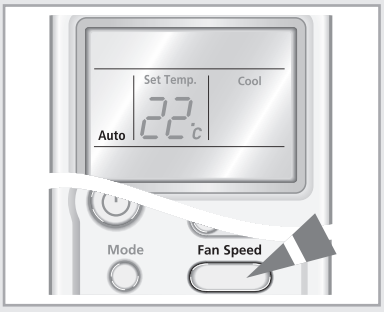

5 To control the airflow direction, refer to page 20.

Vivace_Inv_IB_31718A_E_1.28.10.indd 13 2010-1-28 13:46:12

Selecting Heat Mode

You can select Heat mode if you want to heat your room.
You can adjust the temperature and the fan speed when heating.

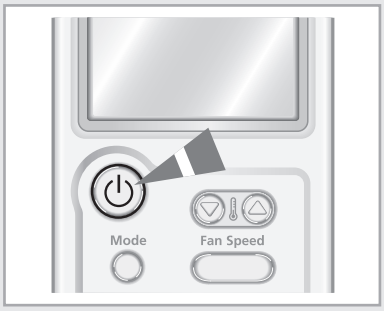

1 Press the (On/Off) button.

Result:
- The operation indicator on the indoor unit lights up.
- The air conditioner starts up in the mode you selected last.
- The indoor unit beeps.

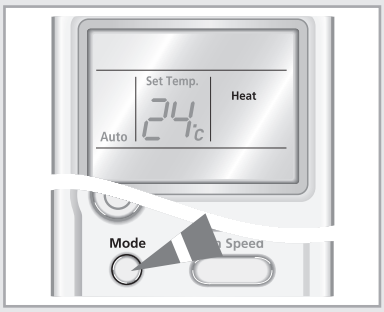

2 Press the Mode button on the remote control until **Heat** is displayed.

Result:
- The indoor unit beeps each time you press the Mode button.
- The air conditioner runs in Heat mode.

Note You can change modes at any time.

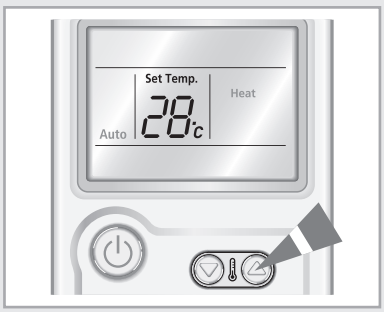

3 Press the button to adjust the temperature until the required temperature is displayed.
You can set the temperature between 16°C and 30°C.

Result:
- Each time you press the button:
  - The temperature adjusts by 1°C
  - The indoor unit beeps
- If the room temperature reaches the set temperature (selected temperature+5°C), the air conditioner stops heating,but the fan is still operating.
- The air conditioner starts heating, provided that the room temperature is lower than the desired temperature (selected temperature+3°C).

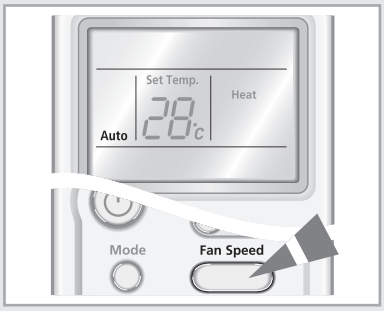

4 Press the Fan Speed button to select the fan speed until the required setting is displayed.

Auto → Low → Medium → High

Result:
- Each time you press the Fan Speed button, the indoor unit beeps.
- For the first 3~5 minutes, the fan may not operate to prevent cool air from flowing out of the indoor unit.
  This helps to warm the air in your room sufficiently.

5 To control the airflow direction, refer to page 20.

Vivace_Inv_IB_31718A_E_1.28.10.indd 14 2010-1-28 13:46:17

Selecting Dry Mode

Select Dry mode if you want to dehumidify your room.
You can adjust the temperature in this mode.

1 Press the (On/Off) button.

Result:
- The operation indicator on the indoor unit lights up.
- The air conditioner starts up in the mode you selected last.
- The indoor unit beeps.

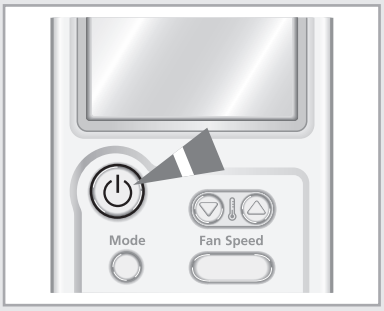

2 Press the Mode button on the remote control until **Dry** is displayed.

Result:
- The indoor unit beeps each time you press the Mode button.
- The air conditioner runs in the Dry mode.

Note You can change modes at any time.

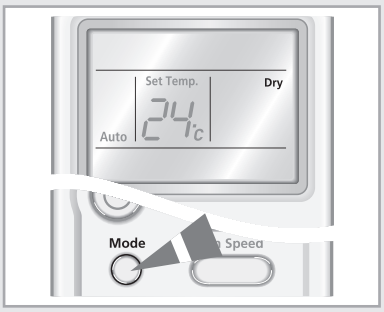

3 Press the button to adjust the temperature until the required temperature is displayed.
You can set the temperature between 18°C and 30°C.

Result:
- Each time you press the button:
  - The temperature adjusts by 1°C
  - The indoor unit beeps
- The air conditioner starts dehumidifying and the fan speed adjusts automatically.

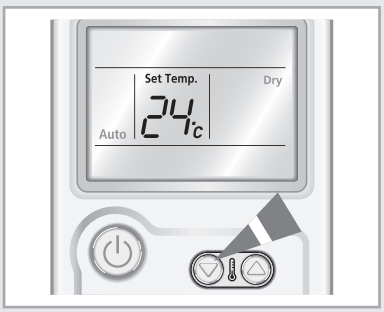

4 To control the airflow direction, refer to page 20.

Vivace_Inv_IB_31718A_E_1.28.10.indd 15 2010-1-28 13:46:21

Selecting Fan Mode

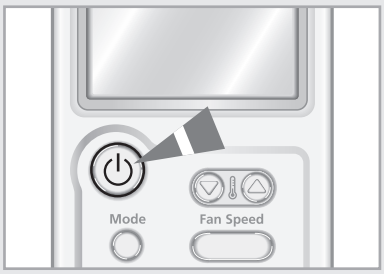

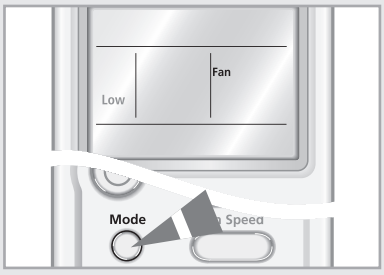

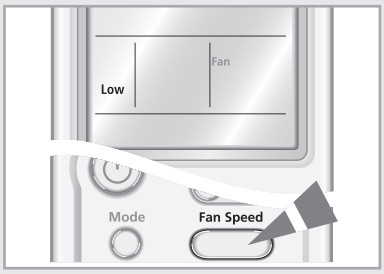

Select Fan mode if you want to ventilate your room. It helps to refresh the air in your room. You can adjust the fan speed in this mode.

1 Press the (On/Off) button.

Result:
- The operation indicator on the indoor unit lights up.
- The air conditioner starts up in the mode you selected last.
- The indoor unit beeps.

2 Press the Mode button on the remote control until **Fan** is displayed.

Result:
- The indoor unit beeps each time you press the Mode button.
- The air conditioner runs in Fan mode.
- The temperature is set automatically.

Note You can change modes at any time.

3 Press the Fan Speed button to adjust the temperature until the required setting is displayed.

Low ⇢ Medium ⇢ High

Result: Each time you press the Fan Speed button, the indoor unit beeps.

4 To control the airflow direction, refer to page 20.

Selecting the Turbo Function

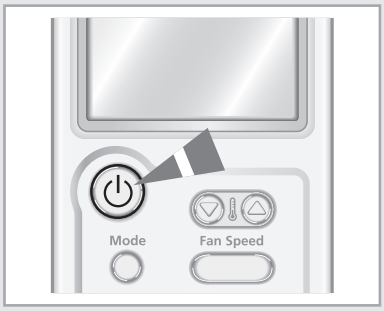

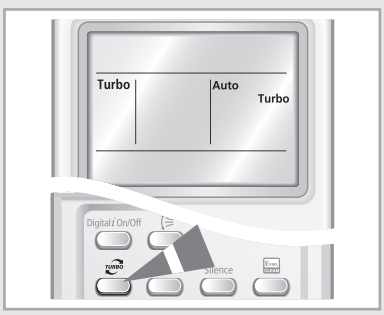

You can select the Turbo Function if you want to cool or heat your room as quickly as possible. The Turbo function operates for 30 minutes with the maximum settings before returning automatically to the mode and temperature previously selected.

1 Press the (On/Off) button.

Result:
- The operation indicator on the indoor unit lights up.
- The air conditioner starts up in the mode you selected last.
- The indoor unit beeps.

2 Press the TURBO button.

Result:
- The temperature and fan settings are adjusted automatically.
- The air conditioner cools or heats the room as quickly as possible.
- After 30 minutes, the air conditioner is reset automatically to the previous setting.
- You can select the Turbo function in Auto, Cool and Heat mode. If you select this function in Dry or Fan mode, the mode changes to Auto mode.

3 Press the TURBO button again to stop the Turbo Function before the end of the 30-minute period.

Result: The air conditioner is reset automatically to the previous setting.

4 To control the airflow direction, refer to page 20.

Vivace_Inv_IB_31718A_E_1.28.10.indd 16 2010-1-28 13:46:26

Selecting the Energy Saving Function

You can select the Energy Saving Function to save energy when cooling. The temperature range decreases in order to perform this function.

1 Press the (On/Off) button.

Result:
- The operation indicator on the indoor unit lights up.
- The air conditioner starts up in the mode you selected last.
- The indoor unit beeps.

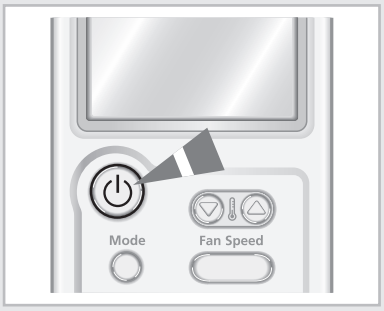

2 Press the button.

Result:
- The indoor unit beeps.
- The air conditioner runs in the Energy saving function.
- The outer airflow blade moves up and down.
- The airflow direction indicator is displayed automatically.
- To stop the Energy saving function, press the again.

Note You can select the Energy saving function only in Cool mode.

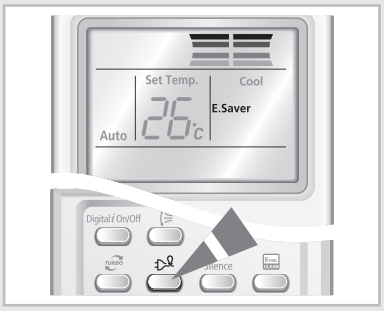

3 Press the button to adjust the temperature until the required temperature is displayed.
You can set the temperature between 26°C and 30°C.

Note If you want to adjust temperature under 26°C, cancel the Energy saving function before adjusting the temperature.

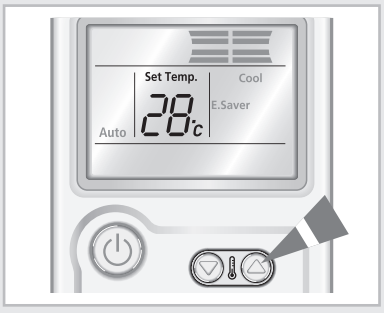

4 Press the Fan Speed to select the fan speed until the required setting is displayed.

Auto ⇢ Low ⇢ Medium ⇢ High

Result: Each time you press the Fan Speed button, the indoor unit beeps.

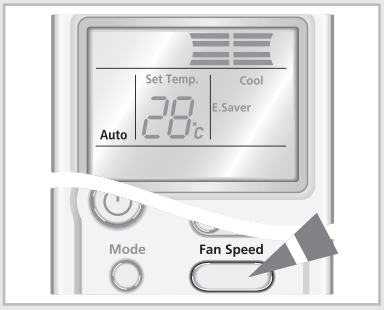

5 To control the airflow direction, refer to page 20.

Vivace_Inv_IB_31718A_E_1.28.10.indd 17 2010-1-28 13:46:32

Selecting good'sleep Mode

good'sleep ***mode helps users to fall asleep well after going to bed whether being too hot to sleep or being awakened by coldness. The*** good'sleep ***mode can be selected only when the air conditioner is switched on or off in cool/heat mode.***

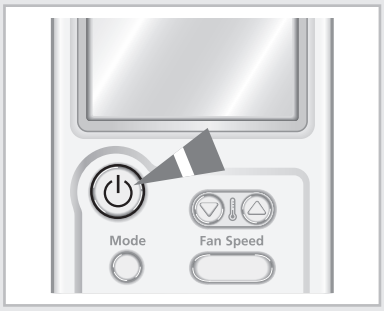

1 Press the (On/Off) button.

Result:
- The operation indicator on the indoor unit lights up.
- The air conditioner starts up in the mode you selected last.
- The indoor unit beeps.

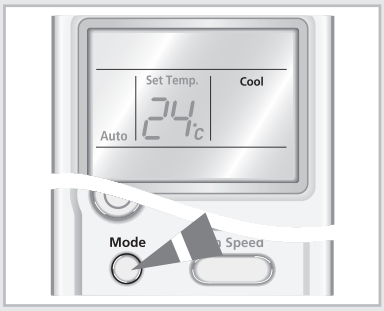

2 Press the Mode button to select **cool** or **heat** mode.

Result:
- The indoor unit beeps each time you press the Mode button.
- The air conditioner runs in cool or heat mode.

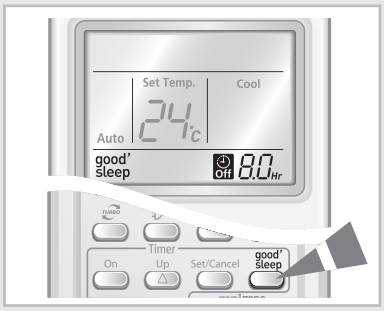

3 Press the good' sleep button.

Result:
- The timer indicator is displayed.
- The Off timer is blinking on the remote control.

4 To set the **good'sleep** Off timer, press the Up/Down buttons once or more times until the required Off time is displayed.

Result:
- The **good'sleep** mode will be automatically stopped in 8 hours if the operation time is not set.
- You can set the Off timer by pressing the Up/Down buttons to turn off the **good'sleep** mode automatically at the appointed time within a range of 30 minutes to 12 hours.
- Each time the Up/Down buttons are pressed, the time is increased by 30 minutes or 1 hour. **good'sleep** mode will be stopped at the appointed off time.

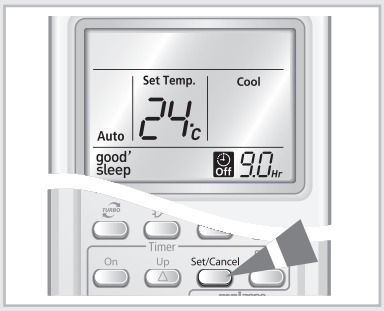

5 Press the Set/Cancel button.

Result: The remaining time is displayed.

Note In the case of selecting **good'sleep** mode or adjusting the extra time for **good'sleep** mode, you should press the Set/Cancel button within 10 seconds. If you do not press the Set/Cancel button within 10 seconds, **good'sleep** mode will be canceled automatically.

6 Press the button to adjust the temperature until the desired temperature is displayed.
You can set the temperature between 16°C and 30°C.

Result: Each time you press the button;
- The temperature adjusts by 1°C
- The indoor unit beeps

Vivace_Inv_IB_31718A_E_1.28.10.indd 18 2010-1-28 13:46:39

Temperature changes in good' sleep mode

To prevent excessive cooling/heating during sleep, the good' sleep mode automatically modifies the temperature setting in accordance with the time setting. Temperature and air current change according to the three stages; Falling asleep, Sound sleep, and Waking up from good' sleep mode, and then the air conditioner will automatically turn off when the set time has elapsed.

Three stage good' sleep prevents you from having difficulty sleeping on extremely hot/cold nights.

① **Falling asleep** : Eases you into sleep by dropping the temperature.
② **Sound sleep** : Relaxes your body and raises your temperature slightly.
③ **Waking up from** good' sleep **mode** :
Allows you to wake up to comfortable crisp air making you feel refreshed and energized.

- Set the Off timer in good' sleep mode for more than 5 hours. Sleep may be disturbed if the good' sleep mode is set for too short or too long a time because the temperature changes are set to an 8-hour cycle.
- If the good' sleep mode is set for less than 4 hours, the operation will stop at the set time. If the good' sleep mode is set for over 5 hours, the last hour will run in Waking Up stage before shutting off.
- Recommended set temperature is between 25˚C~27˚C for cooling and 21˚C~23˚C for heating.

To deactivate good' sleep mode

1. Press the **Set/Cancel** button on the remote control.

good' sleep mode shuts off and the good' sleep indicator will disappear.

Vivace_Inv_IB_31718A_E_1.28.10.indd 19 2010-1-28 13:46:47

Adjusting the Airflow Direction

Adjust the airflow direction to circulate the air according to various needs. By adjusting the airflow direction, the efficiency of the air conditioner can be increased.

Adjusting the Airflow Direction Vertically

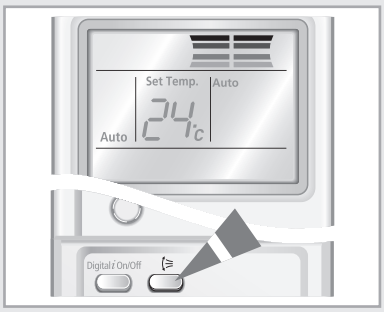

You can adjust the airflow direction vertically. The outer airflow blade moves up and down to increase the efficiency of the cooling or heating operation.

1 Press the button until the required direction is set.

Result: The outer blade is adjusted vertically.

2 Press the button again to move the blade up and down automatically during operation.

3 Press the button again to stop the blade moving up and down.

Note

If you turn the air conditioner...	*Then the blade...*
Off	is closed completely.
On	set to the default position.

Adjusting the Airflow Direction Horizontally

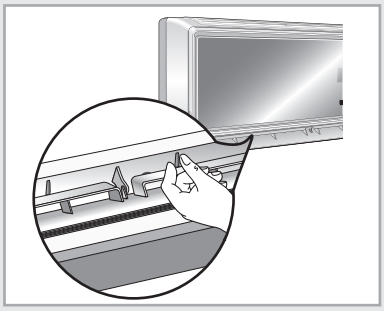

You can adjust airflow direction horizontally manually.
The inner blades with small fins move the air in the desired direction.

1 Adjust the inner blades by moving them left or right.

◆ Make sure do not touch the inner blades during operation. It may cause injury on your fingers.

Vivace_Inv_IB_31718A_E_1.28.10.indd 20 2010-1-28 13:46:50

Selecting the Auto Cleaning Function

Auto cleaning function offers inside air conditioner dry to prevent mold growth. This feature allows you to use the air conditioner more clean and fresh air.

1 Press the Evap. CLEAN button.

▶ **When the air conditioner is turned off,**

The Evap. CLEAN indicator on the indoor unit display appears and the Auto cleaning function runs.

▶ **When the air conditioner is turned on,**

The Evap. CLEAN indicator on the indoor unit display appears and the Auto cleaning function runs after stopping the air conditioner operation.

Mode	*Operating time*
Auto(cool), Cool, Dry	30 minutes
Auto(heat), Heat, Fan	15 minutes

Caution **Auto cleaning operating time varies according to the mode you selected before the air conditioner turned off.**

Note

- The Auto Cleaning indicator appears only on the indoor unit display.
- When the air conditioner is turned on, the Auto cleaning function runs after stopping the air conditioner operation.

Remote Control

Control Panel

Vivace_Inv_IB_31718A_E_1.28.10.indd 21 2010-1-28 13:46:51

Setting the On Timer

You can set the On Timer to turn on the air conditioner automatically at the appointed time within a range of 30 minutes to 24 hours.

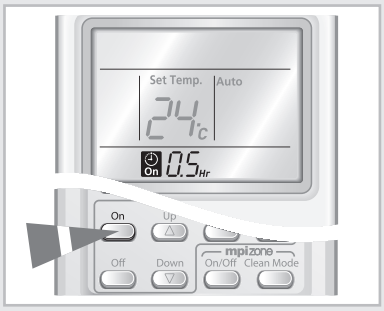

1 Press the On button .

2 Press the Up or Down buttons until the desired time is displayed to set the On Timer. You can set the time between 0.5 hour and 24 hours.

3 Press the Set/Cancel button to complete the setting.

Result:
- The remaining time is displayed.
- The timer indicator stops blinking.
- The selected mode and the temperature on the display disappear after 10 seconds.
- The air conditioner turns on automatically at the appointed time and the On Timer setting disappears.

4 Press the Mode button until the desired mode is displayed at the top of the remote control to select the mode in advance.

Result: The air conditioner operates in the selected mode when it is turned on.

Note
- The most recently used function is set between On and Off Timer to turn on/off the air conditioner and **good'sleep** mode.
- On Timer of **mpi**zone mode cannot be set out separately.

To Cancel the On Timer

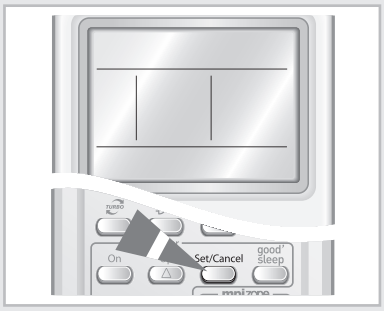

1 Press the Set/Cancel button to cancel the On Timer.

Note If you press the Set/Cancel button, both the On Timer and the Off Timer are canceled.

Vivace_Inv_IB_31718A_E_1.28.10.indd 22 2010-1-28 13:46:57

Setting the Off Timer

You can set the Off Timer to turn off the air conditioner automatically at the appointed time within a range of 30 minutes to 24 hours.

1 Press the Off button .

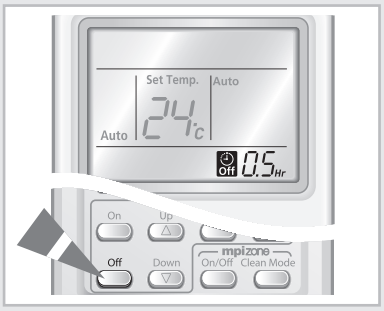

2 Press the Up or Down buttons until the desired time is displayed to set the Off Timer. You can set the time between 0.5 hour and 24 hours.

3 Press the Set/Cancel button to complete the setting.

Result:
- The remaining time is displayed.
- The timer indicator stops blinking.
- The air conditioner turns off automatically at the appointed time and the Off Timer setting disappears.

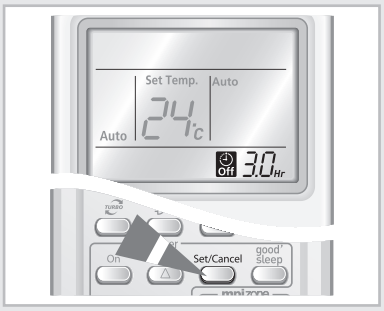

Example **If you would like to turn the air conditioner on after 2 hours and to operate it for 2 hours during non-operation:**

1. Press the On button.
2. Press the Up or Down buttons until '2.0 Hr'is displayed.
3. Press the Set/Cancel button.
4. Press the Off button.
5. Press the Up or Down buttons until '4.0 Hr'is displayed.
6. Press the Set/Cancel button.

Note If you would like to turn on the air conditioner and then to turn off it automatically at the appointed time by using On/Off Timer during operation, you should set the On Timer longer than the Off Timer.

Caution **Make sure that the air conditioner will not continue to run after On Timer setting is confirmed.**

Note
- You can check or change the mode and/or the temperature by pressing the Mode button or the button after setting the Off Timer.
- The most recently used function is set between On and Off Timer to turn on/off the air conditioner and good'sleep mode.
- Off Timer of mpizone mode cannot be set out separately.
- If you would like to turn off the air conditioner and then to turn on it again automatically at the appointed time by using On/Off Timer during non-operation, you should set the Off Timer longer than the On Timer.

To Cancel the Off Timer

1 Press the Set/Cancel button to cancel the Off Timer.

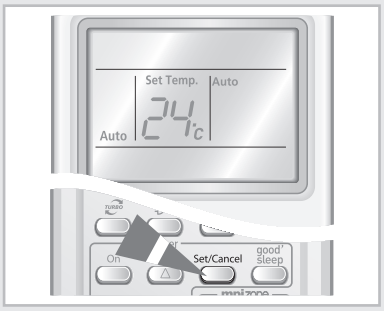

Note If you press the Set/Cancel button, both the On Timer and the Off Timer are canceled.

Vivace_Inv_IB_31718A_E_1.28.10.indd 23 2010-1-28 13:47:12

Selecting Silence Function

Silence function makes the noise much quieter during the operation of the indoor unit.

The silence function is set only in cool and heat mode.

1 Press the (On/Off) button.

Result:
- The operation indicator on the indoor unit lights up.
- The air conditioner starts up in the mode you selected last.
- The indoor unit beeps.

2 Press the Silence button.

Note By Pressing the Silence button again, the silence function is canceled.

Operating Your Air Conditioner Without the Remote Control

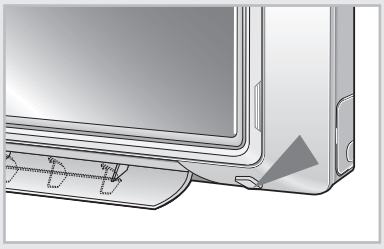

You can operate your air conditioner directly without the remote control.

1 To turn the air conditioner on, press the ON/OFF switch on the right side of the indoor unit.

Result:
- The Operation indicator on the indoor unit lights up.
- The indoor unit beeps.
- The air conditioner starts up in the appropriate mode for the room temperature. The air conditioner changes the Cool or Heat mode automatically depending on the current temperature during operation.

Room Temperature	Operating Mode
Lower than 24°C	Heating
Higher than 24°C	Cooling

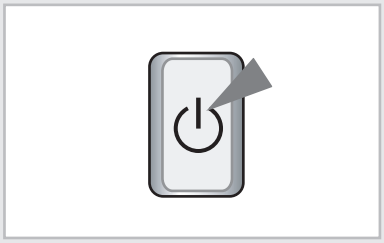

2 To turn the air conditioner off, press the On/Off button again.

Note Even if you turned the air conditioner on with the On/Off button, you can control it with the remote control.

Vivace_Inv_IB_31718A_E_1.28.10.indd 24 2010-1-28 13:47:26

Selecting **mpi** zone Mode

The* mpi zone *mode creates strong purified zone by decomposing harmful particles in the behavior of active hydrogen(H) and oxygen ion(O_2).
The* mpi zone *mode can be selected whether the air conditioner is turned on or not.

1 Press the mpi zone On/Off button.

- ◆ The air conditioner starts up in **mpi** zone-Auto mode automatically.
- ◆ The **mpi** zone mode also runs when the air conditioner is turned on.
- ◆ By pressing the mpi zone On/Off button again, the **mpi** zone mode is canceled.

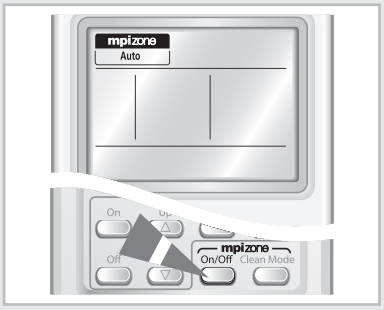

2 Press the mpi zone Clean Mode to select the **mpi** zone operation types.

- ◆ Whenever press the mpi zone Clean Mode button, Auto, Silence and Rapid will appear repeatedly.
- ◆ **Auto**: Controls the fan speed automatically
  Silence: Purifies the indoor air with silence
  Rapid: Purifies the indoor air quickly

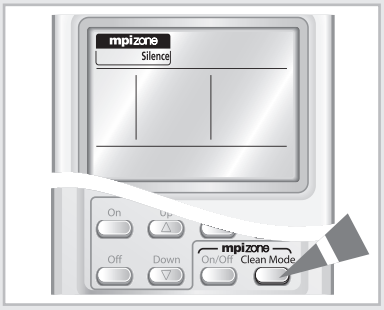

Note

- ◆ ***If* mpi zone *mode is turned on when the air conditioner runs,***
  - You cannot select the **mpi** zone operation types by pressing the mpi zone Clean Mode button. The **mpi** zone mode runs only in Auto.
  - The **mpi** zone mode will also stop by pressing the **Power** button of the panel.
- ◆ **mpi** ***: Micro Plasma Ion***

Vivace_Inv_IB_31718A_E_1.28.10.indd 25 2010-1-28 13:47:30

Cleaning Air Filter on Your Air Conditioner

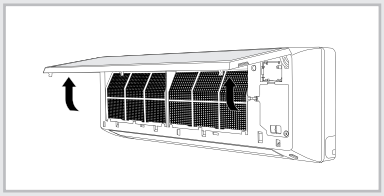

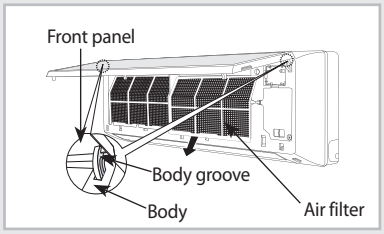

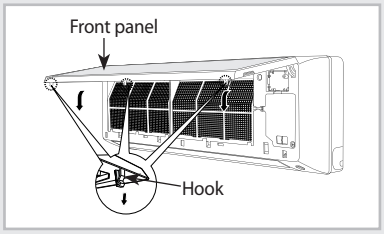

For the best use of your air conditioner, you must clean it every 2 weeks regularly to remove the dust that accumulates on the air filter.

CAUTION ***Before cleaning your air conditioner, ensure that you have switched off the breaker used for the unit.***

1. Open the front panel by pulling tabs on the lower right and left sides of the indoor unit.
2. Detach the front panel by pulling it forwards.
3. Hold the edge of the air filter under the front panel and pull to release.
4. Remove all dust on the air filter with a vacuum cleaner or brush.
5. When you finish, insert the top of the filter into the slot and fix it to 5 tabs or 3 tabs of the grille.
6. Clean the front panel with a damp cloth and mild detergent (do NOT use benzene, solvents or other chemicals).
7. Reassemble the air filter and the front panel.

Note ***If you have not used the air conditioner for a while, select the Fan mode for 3 to 4 hours to dry the inside of the air conditioner.***

Cleaning Deodorizing and Bio filter (Option)

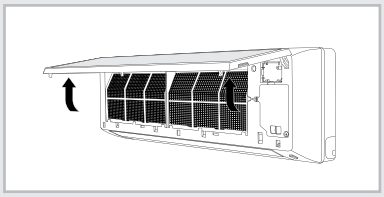

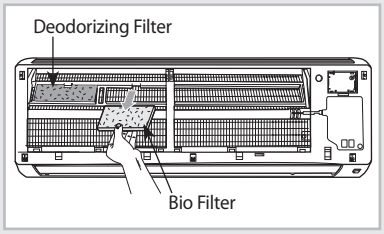

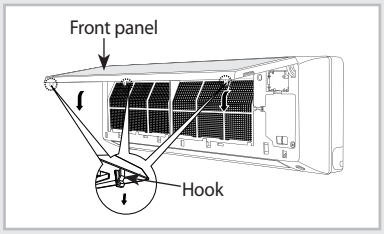

To remove minute dust particles and odors, deodorizing and Bio filter are installed in the air conditioner. You should clean the filters every 3 months.

1. Open the upper front grille by pulling the lower right and left tabs of the grille.
2. Pull out the deodorizing and Bio filter.
3. Wash the filters with clean water, then dry them in the shade.
4. Insert the filters into the original position.

   Note You can change the position of filters with each other.
5. Close the front grille.

Vivace_Inv_IB_31718A_E_1.28.10.indd 26 2010-1-28 13:47:37

Temperature and Humidity Ranges

The table below indicates the temperature and humidity ranges the air conditioner can be operated within. Refer to the table for efficient use.

MODE	OPERATING CONDITIONS	IF OUT OF CONDITIONS
COOL	Indoor temp: 16°C~32°C	- A safety device will stop continuously the system functioning; - Condensation may occur on the indoor unit with risk to have either water blow off or drops on the floor;
	Indoor humidity: below 80%	
	Outdoor temp: -10°C~43°C	
HEAT	Indoor temp: below 27°C	- A safety device will stop continuously the system functioning;
	Outdoor temp: -15°C~24°C	
DRY	Indoor temp: 16°C~32°C	- A safety device will stop continuously the system functioning; - Condensation may occur on the indoor unit with risk to have either water blow off or drops on the floor;
	Indoor humidity: below 80%	
	Outdoor temp: -10°C~43°C	
POWER SUPPLY	Single phase rated voltage minimum and maximum limit	220V-240V~50Hz 198V min.-264V max.

✳ ***Any damage occurs out of condition specified cannot be covered by product warranty.***
If the system works continuosly outside of conditions, its performace and reliability will be compromised.

Vivace_Inv_IB_31718A_E_1.28.10.indd 27 2010-1-28 13:47:39

Operating Recommendations

When you use your air conditioner, it is recommended that you read the following:

Topic	Recommendation
Heating capacity	The heat pump inside the air conditioner absorbs heat from outside air and brings itindoors. If the temperature of the outside air drops, the air conditioner heats less. If the room is not warm enough, use an additional heating appliance.
Warm air circulation	The air conditioner circulates warm air to heat your room. It will take some time to warm the air in your room entirely after the air conditioner turns on. Therefore, turn the air conditioner on in advance.
Frost	When you select the Heat mode, frost may form in the outdoor unit due to low temperature and high humidity. If this happens: ◆ The heating operation is stopped. ◆ The air conditioner defrosts automatically for about 7 minutes. After about 7 minutes, the air conditioner starts operating again normally.
High indoor and outdoor temperatures	If both the indoor and outdoor temperatures are high when you select the Heat mode, the fan and the compressor of the outdoor unit may stop periodically. This is normal; wait until the air conditioner turns on again.
Power failure	If a power failure occurs when the air conditioner is operating, the air conditioner will turn off. When the power returns, the air conditioner will start up again automatically.
Protection mechanism	When the air conditioner is started immediately after being plugged in or stopped, the normal operation starts up after 3 minutes for the reason of protection.
Cooling operation	The indoor unit may not get the selected fan speed such as Medium and Low under cooling operation at very low outdoor temperatures for the protection of the indoor unit from ice or frost. During Low fan speed operation, cooling performance will be reduced. If the room does not be cooled down when using Low fan speed operation, please adjust the indoor unit's fan speed.
Silence Mode	When you operate Silence Mode in cooling and heating, fan speed will decrease to make noise quieter. As a result, the performance of the unit may be reduced.

Vivace_Inv_IB_31718A_E_1.28.10.indd 28 2010-1-28 13:47:39

Solving Common Problems

Before contacting the after-sales service, perform the following simple checks.
They may save you the time and expense of an unnecessary call.

Problem	Explanation/Solution
The air conditioner does not operate at all.	◆ Check if power is on and operate the air conditioner again. ◆ Check if the circuit breaker is switched off. ◆ Check if Off Timer is set.
The temperature is not adjusted.	◆ Check if you selected the Fan mode.
The air conditioner does not operate in the HEAT mode.	◆ Check if the air conditioner is cooling only model. ◆ Check if the remote control is for cooling only model.
The cool(warm) air does not come out from the air conditioner.	◆ Check if set temperature higher(lower) than current temperature. ◆ Check if you selected the Fan mode. Select the Cool, Heat, Auto or Dry mode. ◆ Check if the air filter is blocked by dirt. Clean the air filter regularly. ◆ Check if the there is cover on the outdoor unit or any obstacle. Remove the cover or obstacle. ◆ Check if you installed the air conditioner under direct sunlight. ◆ The window or door may be opened. ◆ Check if you turn on the air conditioner just now. It takes about 3 minutes to cool or heat the room. ◆ Check if the drain pipe is too long.
The fan speed is not adjusted.	◆ In Auto or Dry mode, the fan speed is selected automatically.
The remote control does not operate.	◆ Check if the battery is discharged. Replace the battery. ◆ Check if the remote control sensor is blocked. ◆ Check if the air conditioner is placed near strong light.
The Timer is not set.	◆ Check if you pressed the Set/Cancel button after selecting time.
Odor is permeated in the room during operation.	◆ Check if you use the air conditioner in smoky area or there is a smell. Ventilate the room or select the Fan mode for 1~2 hours.
The indoor unit indicator flashes.	◆ Press the ⏻ button to turn on the air conditioner again. Switch the circuit breaker off and switch on it again.
Strange sound is heard from the air conditioner.	◆ The sound is heard when the refrigerant gas flow is changed depending on the use of the air conditioner. ◆ When you press the ⏻ button, noise may be heard that the air conditioner sense the airflow blade.
Water drops from the outdoor unit connection part.	◆ Water may form due to the difference of the temperature.

SYMPTOMS	CHECK ERROR MODE (DISPLAYED)	MANAGEMENT
The abnormal signal is displayed	Some signal is displayed on the window LED like E101, E121, E122, E154, E162, E186, E102 , All blink, E221, E230, E251, E415, E458, E461 , E462, E464, E465, E467, E468, E469, E471, E472, E554, E556	This product has something wrong, please call the nearest contact center.

Vivace_Inv_IB_31718A_E_1.28.10.indd 29 2010-1-28 13:47:41

SAMSUNG ELECTRONICS

Contact SAMSUNG WORLD WIDE

If you have any comments or questions regarding a Samsung product, contact the SAMSUNG customer care center.

Country	Customer Care Center ☎	Web Site
ARGENTINE	0800-333-3733	www.samsung.com
BRAZIL	0800-124-421 4004-0000	www.samsung.com
CHILE	800-SAMSUNG(726-7864)	www.samsung.com
NICARAGUA	00-1800-5077267	www.samsung.com
HONDURAS	800-7919267	www.samsung.com
COSTA RICA	0-800-507-7267	www.samsung.com
ECUADOR	1-800-10-7267	www.samsung.com
EL SALVADOR	800-6225	www.samsung.com
GUATEMALA	1-800-299-0013	www.samsung.com
JAMAICA	1-800-234-7267	www.samsung.com
PANAMA	800-7267	www.samsung.com
PUERTO RICO	1-800-682-3180	www.samsung.com
REP. DOMINICA	1-800-751-2676	www.samsung.com
TRINIDAD & TOBAGO	1-800-SAMSUNG(726-7864)	www.samsung.com
VENEZUELA	0-800-100-5303	www.samsung.com
COLOMBIA	01-8000112112	www.samsung.com
INDIA	3030 8282 1800 110011 1800 3000 8282 1800 266 8282	www.samsung.com
INDONESIA	0800-112-8888 021-5699-7777	www.samsung.com
MALAYSIA	1800-88-9999	www.samsung.com
PHILIPPINES	1-800-10-SAMSUNG(726-7864) 1-800-3-SAMSUNG(726-7864) 1-800-8-SAMSUNG(726-7864) 02-5805777	www.samsung.com
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com
THAILAND	1800-29-3232 02-689-3232	www.samsung.com
VIETNAM	1 800 588 889	www.samsung.com
SOUTH AFRICA	0860-SAMSUNG(726-7864)	www.samsung.com

Ⓒ Samsung Electronics Co., Ltd. All Rights Reserved.

USER'S MANUAL

AQV09VB✳ Series
AQV12VB✳ Series
AQV18VB✳ Series
AQV24VB✳ Series

ENGLISH

ESPAÑOL

PORTUGUÊS

Split - type Air Conditioner

(Cooling and Heating)

ⒺⓈⓅ DB98-31718A(1)

Vivace_Inv_IB_31718A_E_1.28.10.indd 31 2010-1-28 13:47:42